

VeGA MaxSpeed H10M			
No.	ID zboží	Název	Foto
1	50H10M001	10" Scooter Frame	
2	50H10M002	Silicon rubber	
3	50H10M003	Adaptor	
4	50H10M004	10" Back wheel	
5	50H10M005	10" Front motor	
6	50H10M006	Hook-docking	
7	50H10M007	Handle bar holder	
8	50H10M008	Handle brake with bell	
9	50H10M009	drum brake parts	
10	50H10M010	Handle rubber tube	
11	50H10M011	10" rear fender	
12	50H10M012	ON/OFF button	
13	50H10M013	8.5" front fender	
14	50H10M014	10" front fork holder	
15	50H10M015	Display cover	
16	50H10M016	rear-fork plastic cover	
17	50H10M017	rear light cover	
18	50H10M018	Cross spacer	
19	50H10M019	brake-cable silicon rubber	
20	50H10M020	three-hole-silicon rubber	

VeGA MaxSpeed H10M

No.	ID zboží	Název	Foto
21	50H10M021	one-hole silicon rubber	
22	50H10M022	10" standing pole	
23	50H10M023	10" front fork	
24	50H10M024	foot stand spacer	
25	50H10M025	foot stand	
26	50H10M026	battery 36V 10Ah	
27	50H10M027	controller	
28	50H10M028	display	
29	50H10M029	rear light	
30	50H10M030	swtich	
31	50H10M031	front light	
32	50H10M032	connect cable	
33	50H10M033	accelarator finger pedal	
34	50H10M034	charging port	
35	50H10M035	side sticker (black color)	
36	50H10M036	brake cable	
37	50H10M037	turning-bowl kit	
38	50H10M038	fasten folding mechanism cover	